

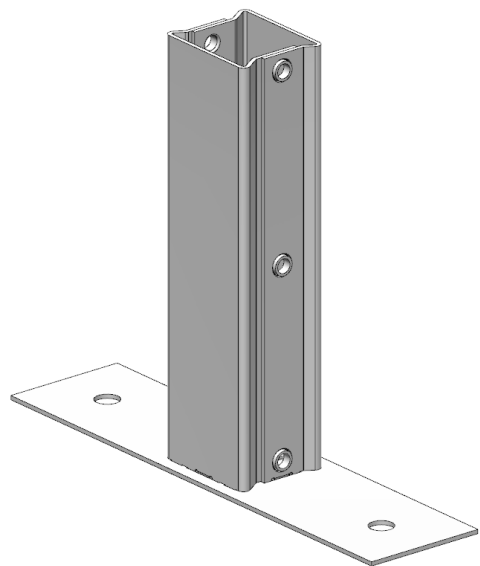
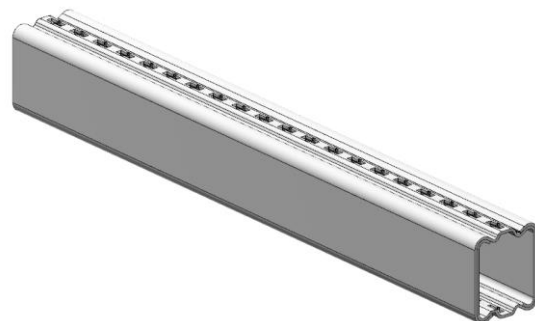



# Stiflex

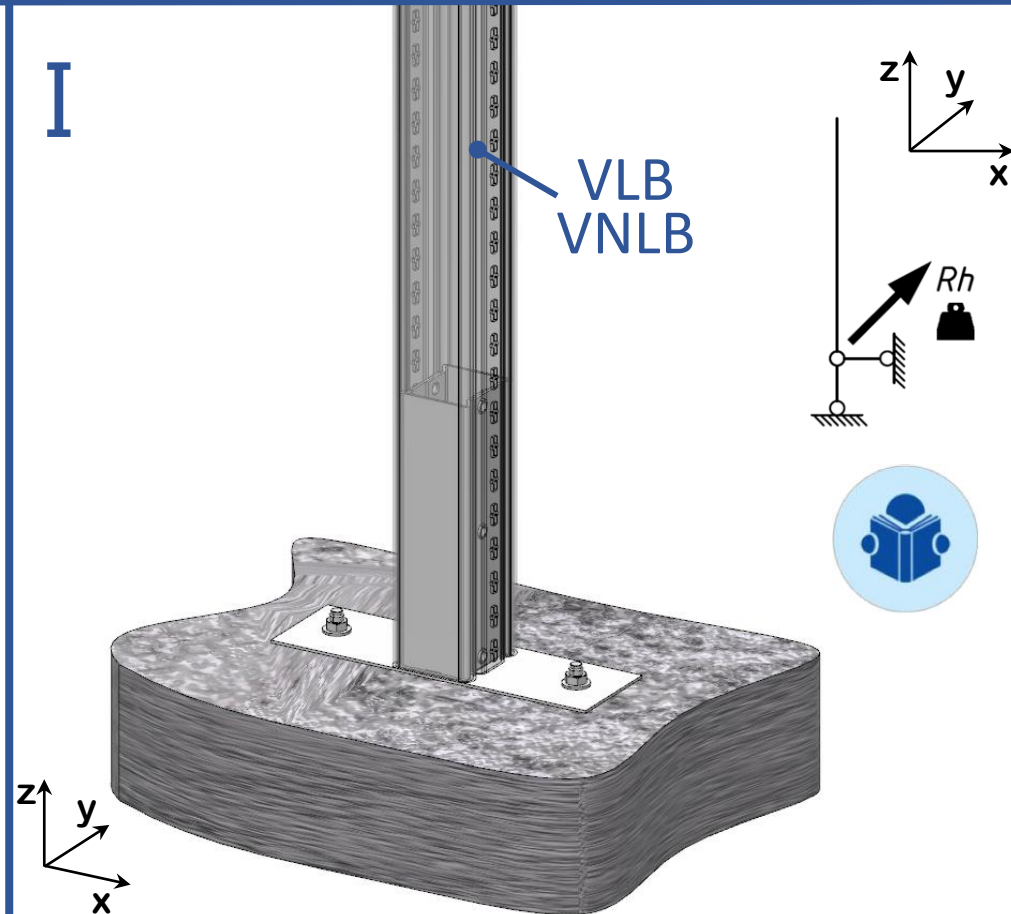


CF0606/200  
CF0606/200-W

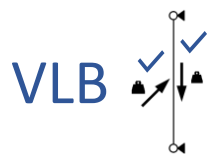


1x MS060620

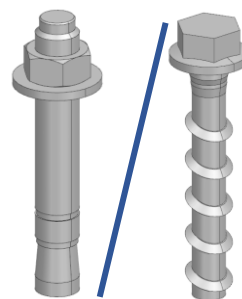


2x M10

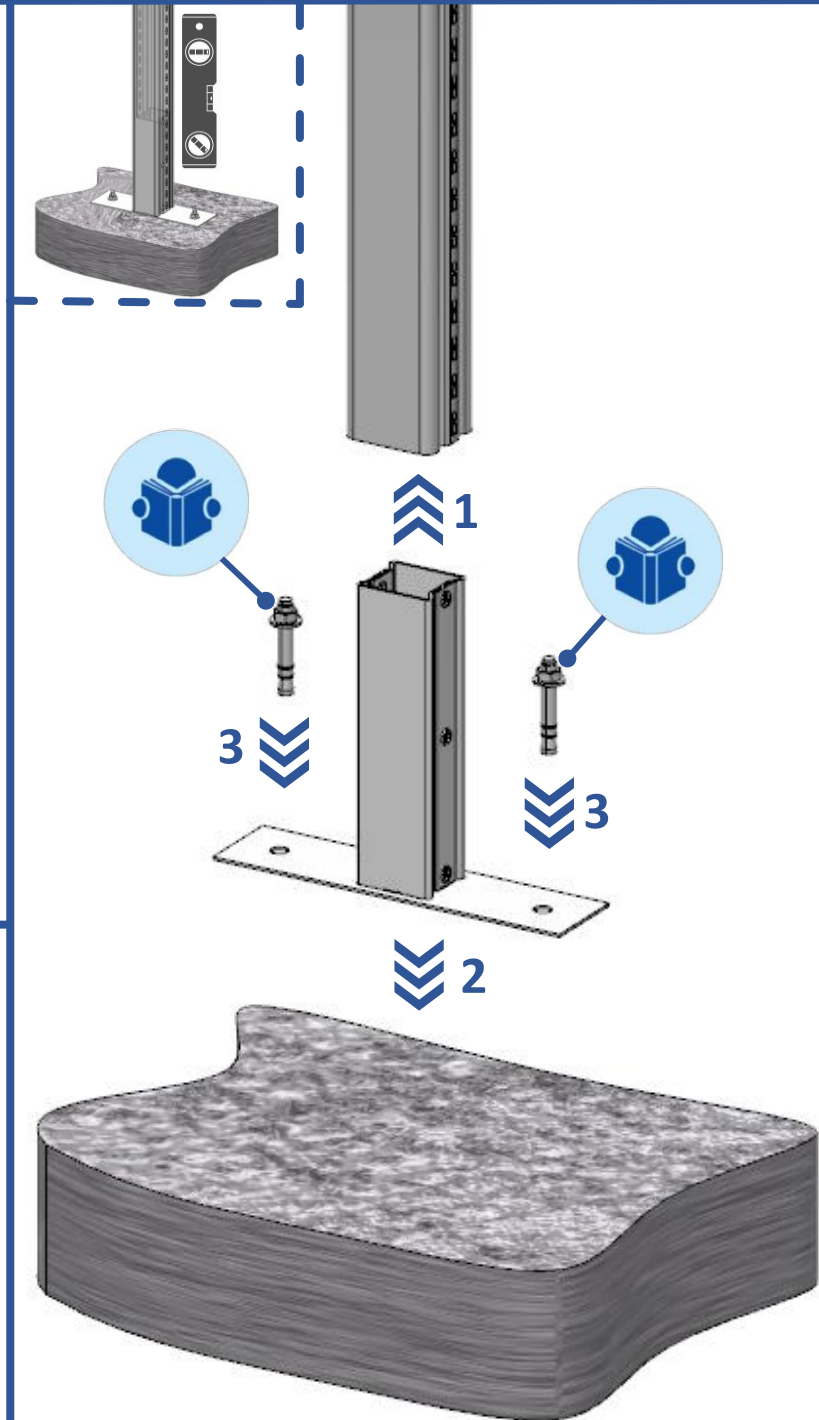


# Stiflex

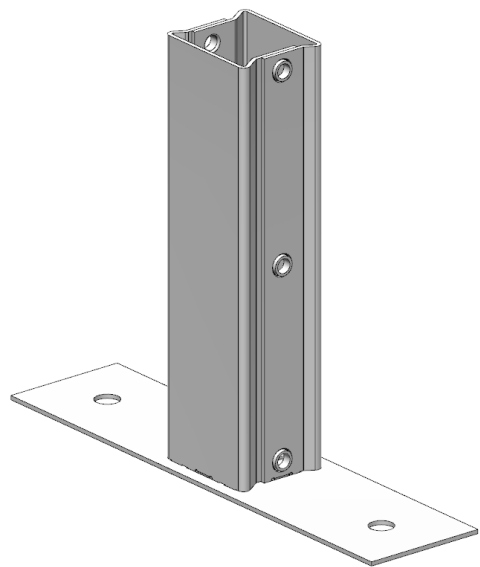



CF0606/200  
CF0606/200-W

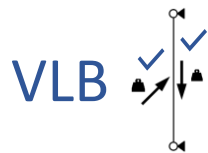


IIa

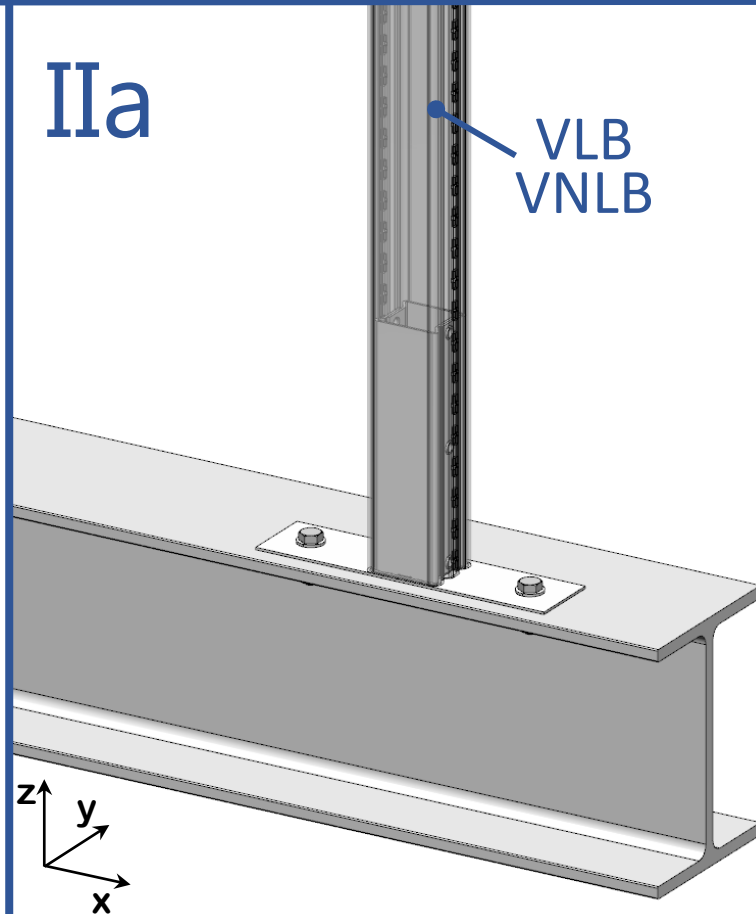


VLB  
VNLB

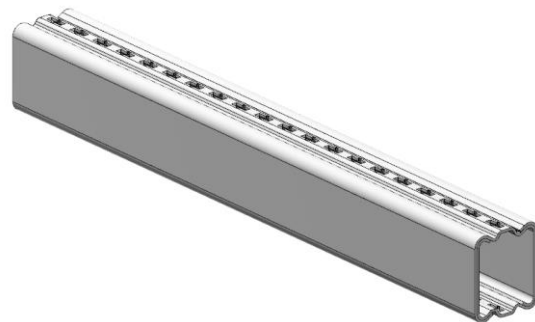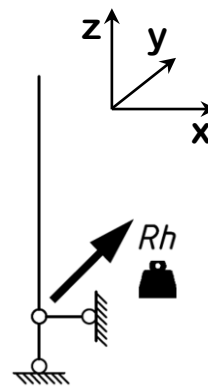

1x MS060620

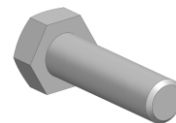


2x M10




4x M10




4x M10

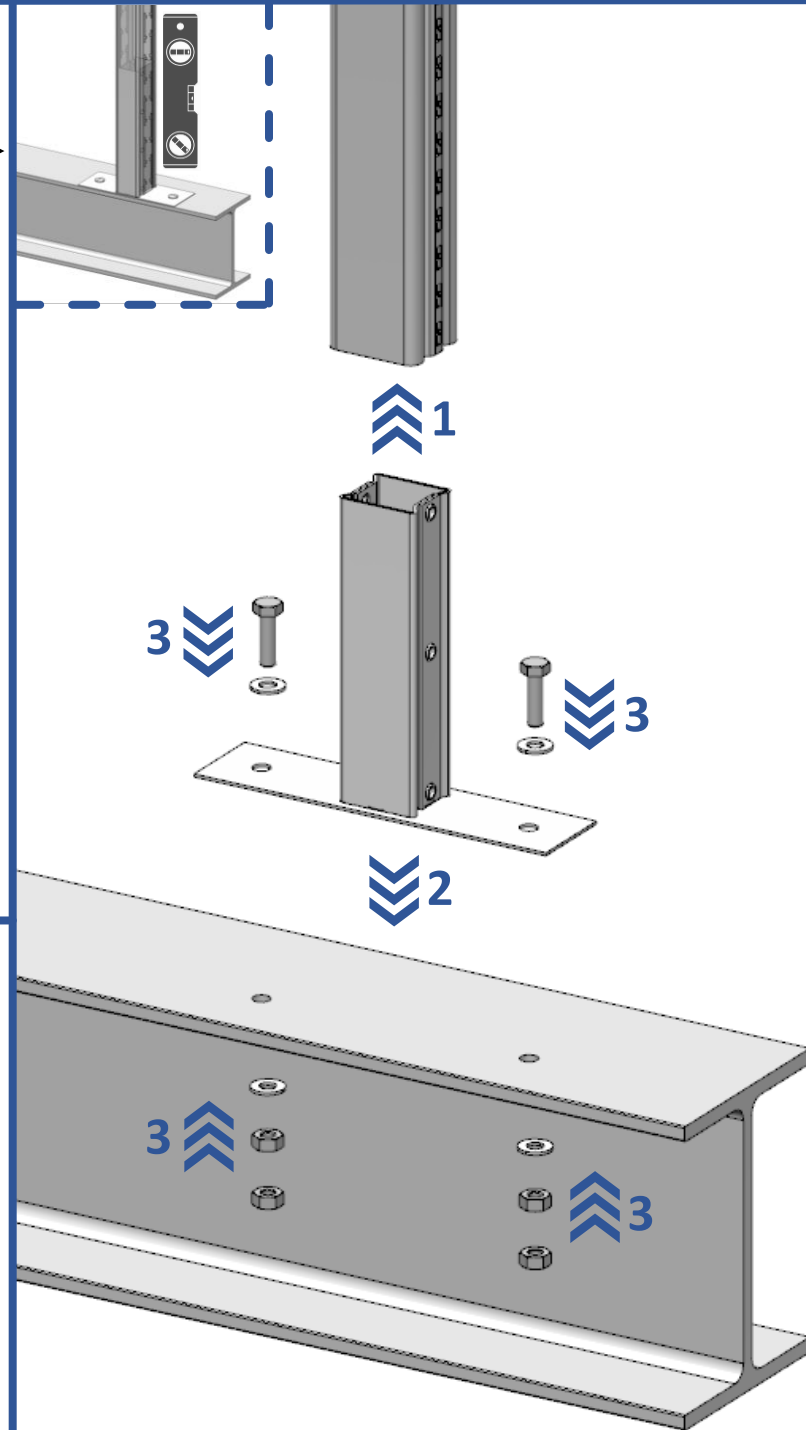





# Stiflex

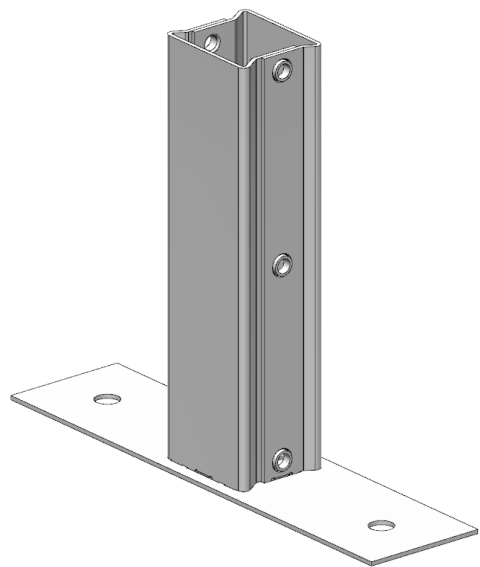


CF0606/200  
CF0606/200-W

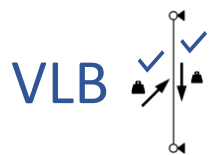

## IIb

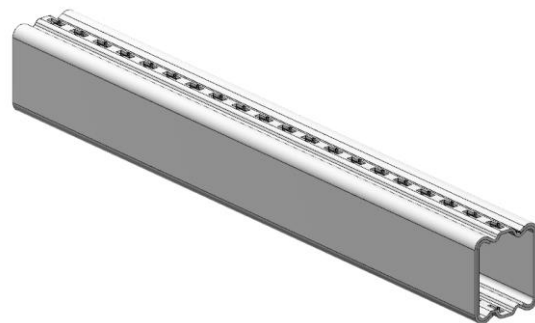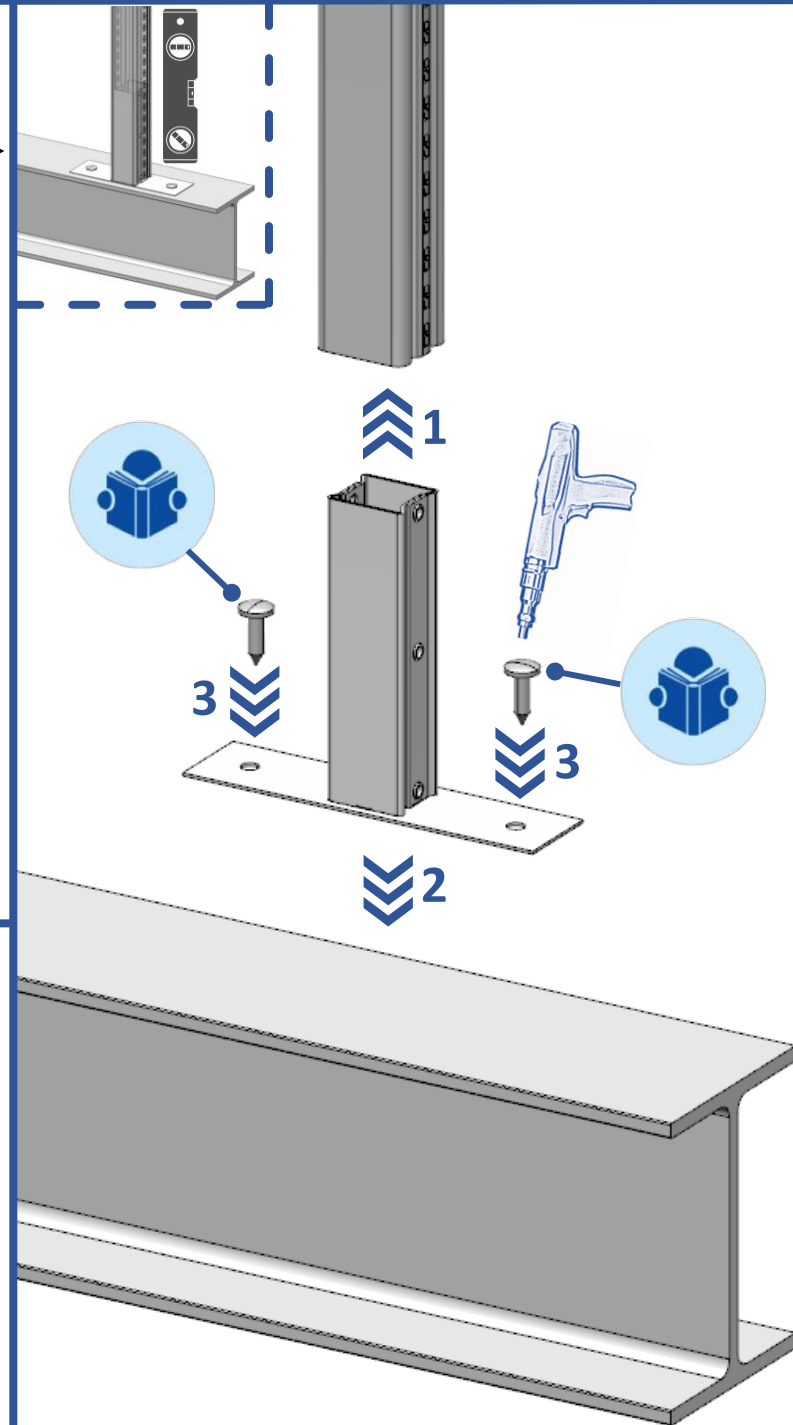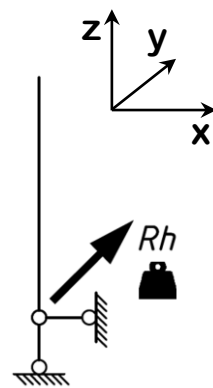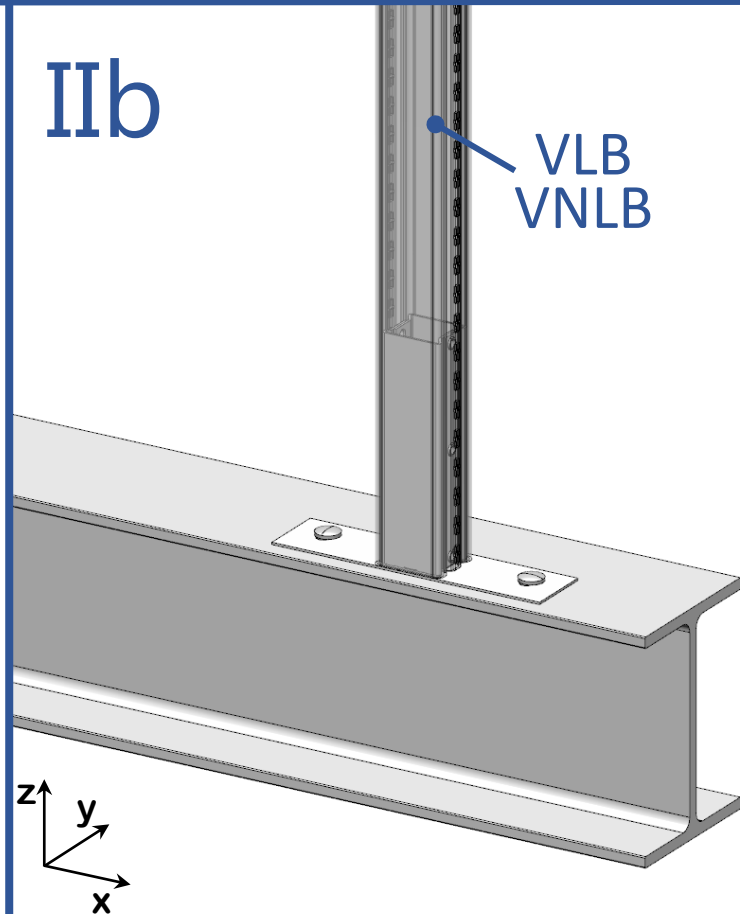

1x MS060620

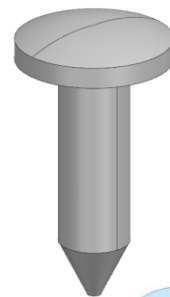

2x

