

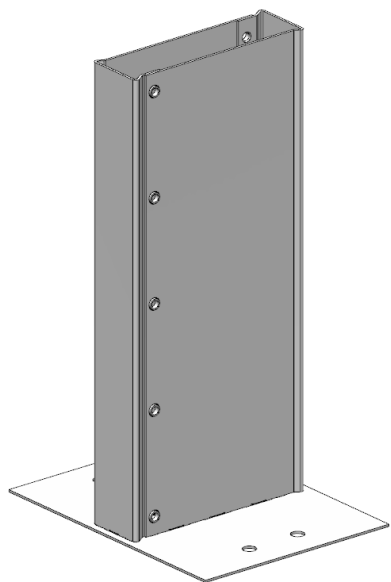
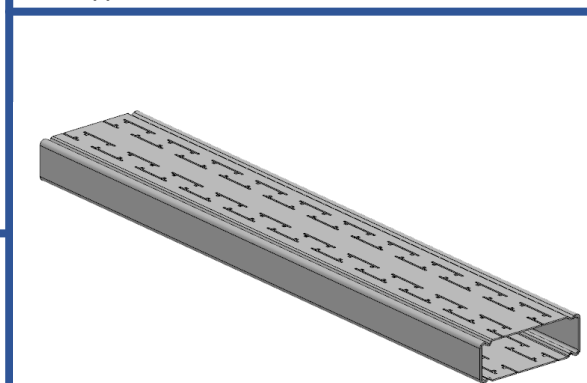



# Stiflex

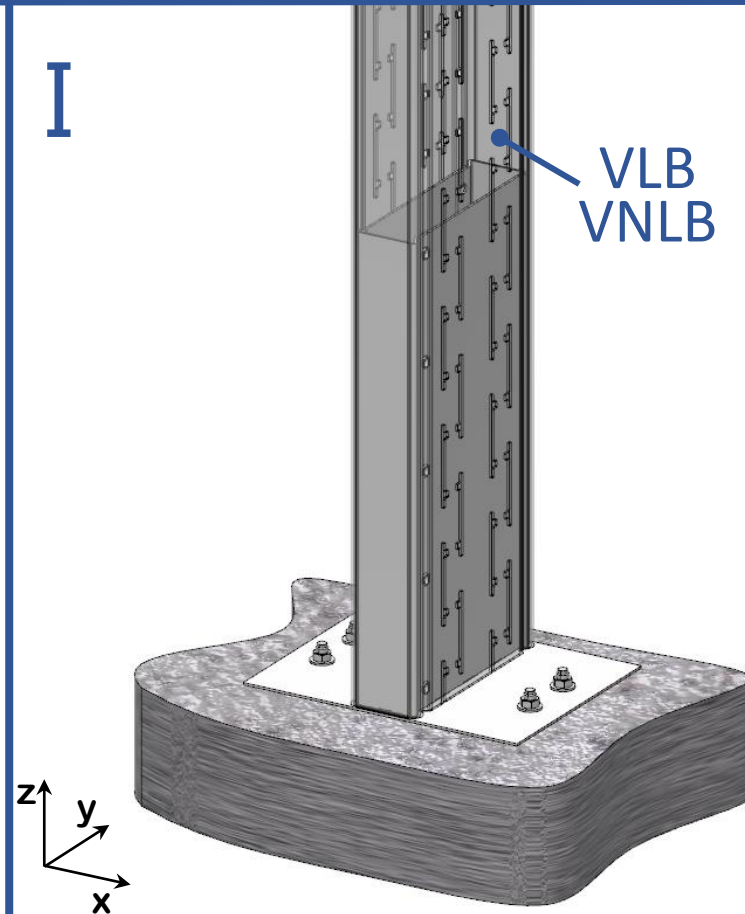


CF1906/400  
CF1906/400-W

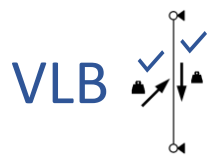


1x MR190620

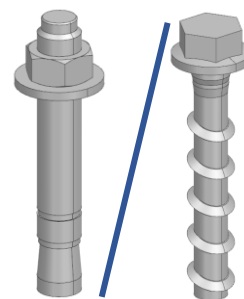


2x M10

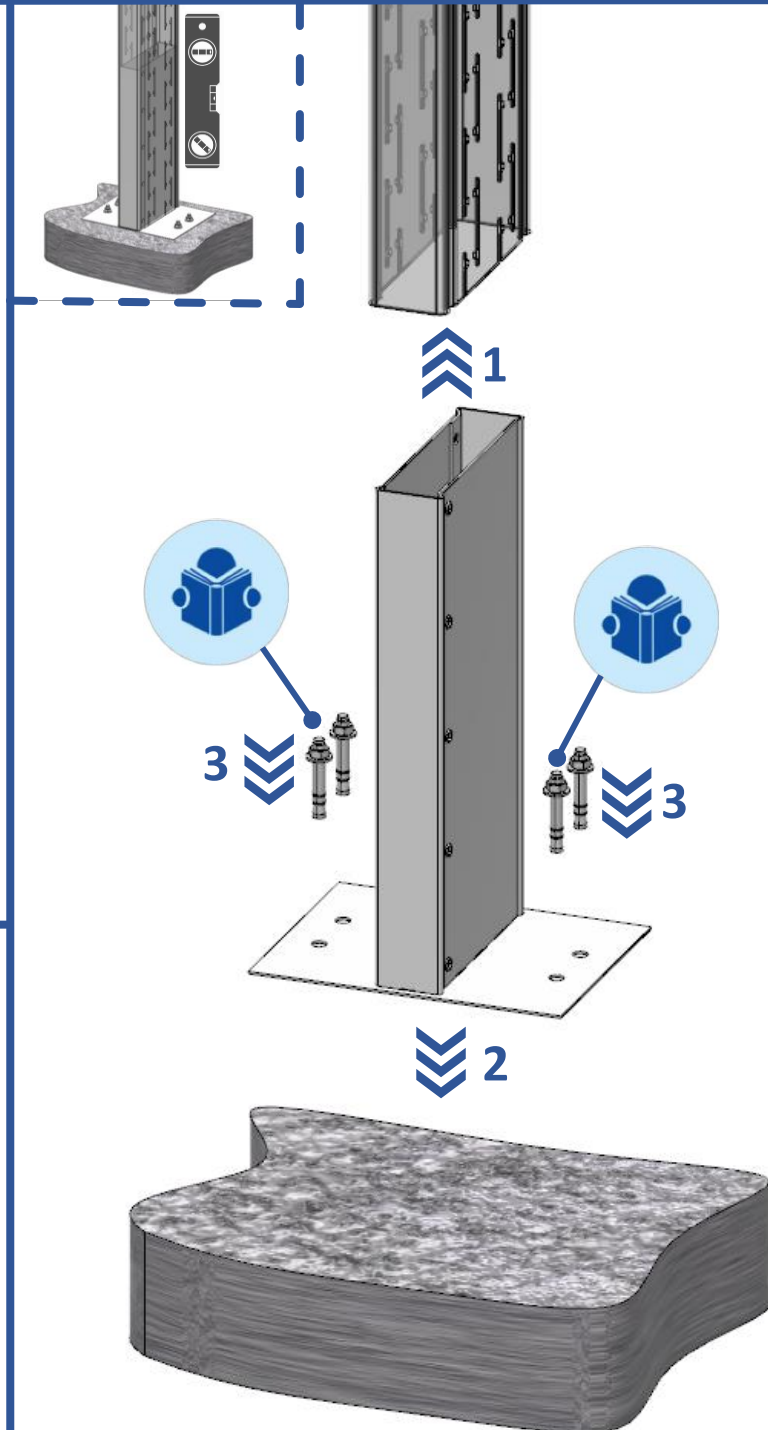


# Stiflex

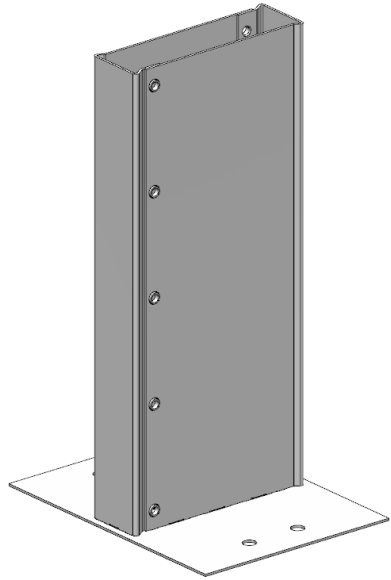




CF1906/400  
CF1906/400-W

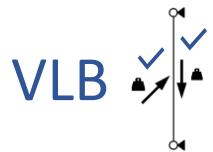


IIa

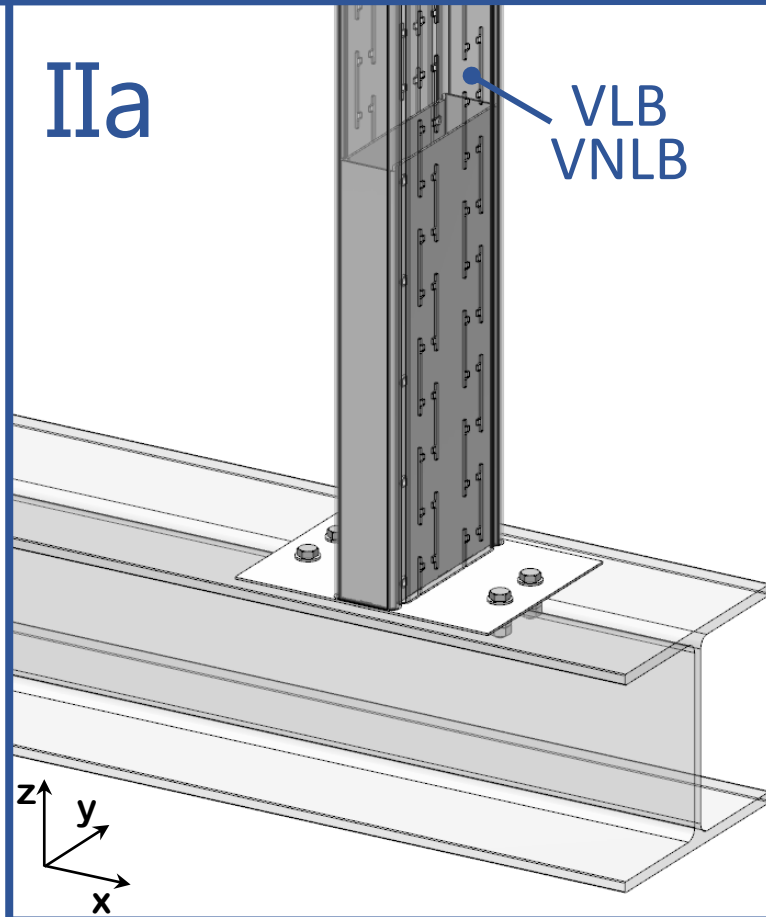


VLB  
VNLB

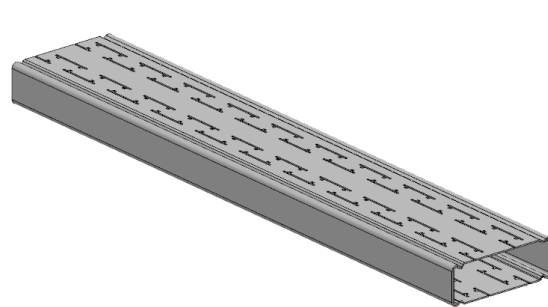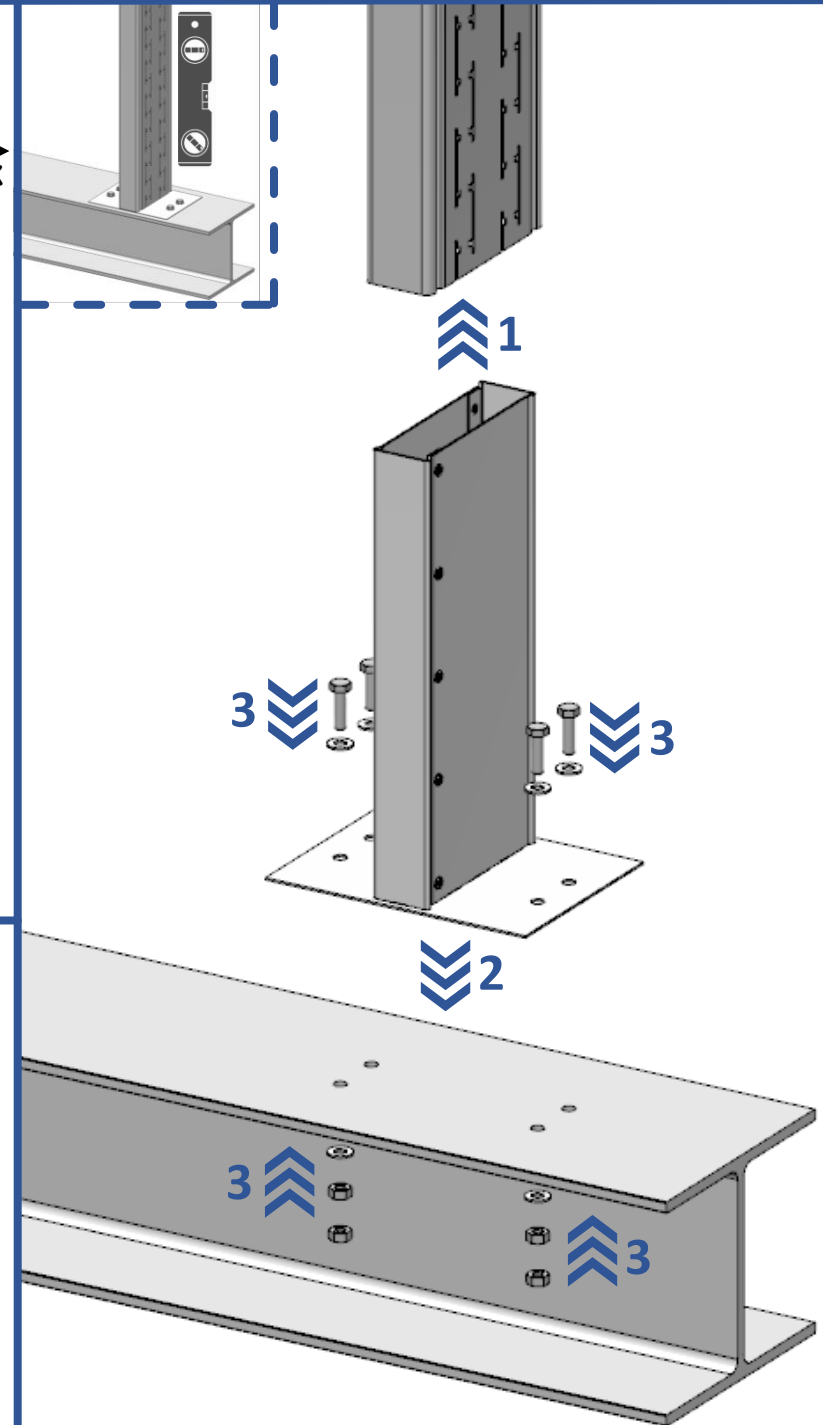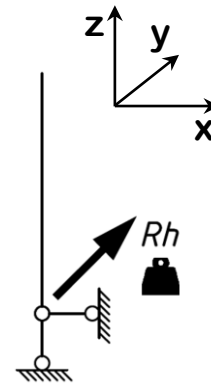

1x MR190620

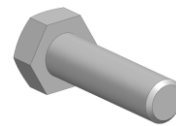

4x M10




8x M10




8x M10




# Stiflex

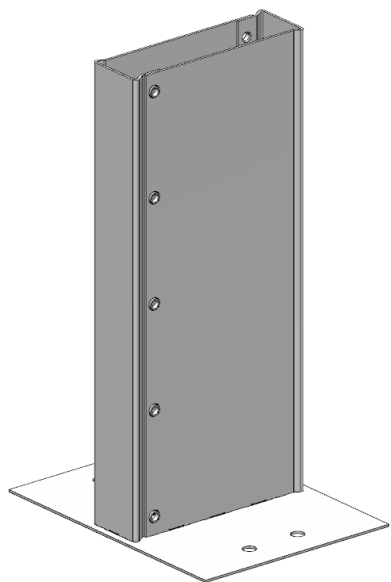


CF1906/400  
CF1906/400-W

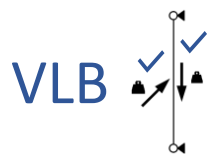

## IIb

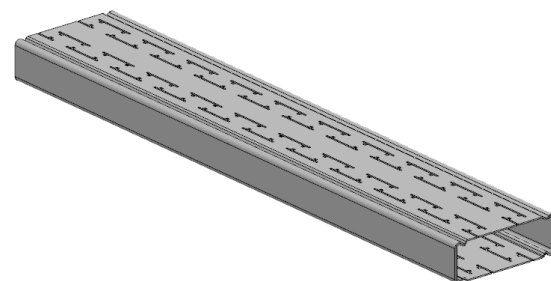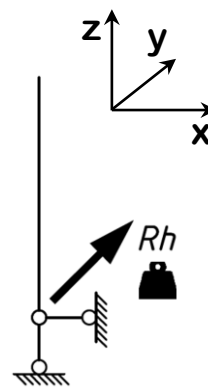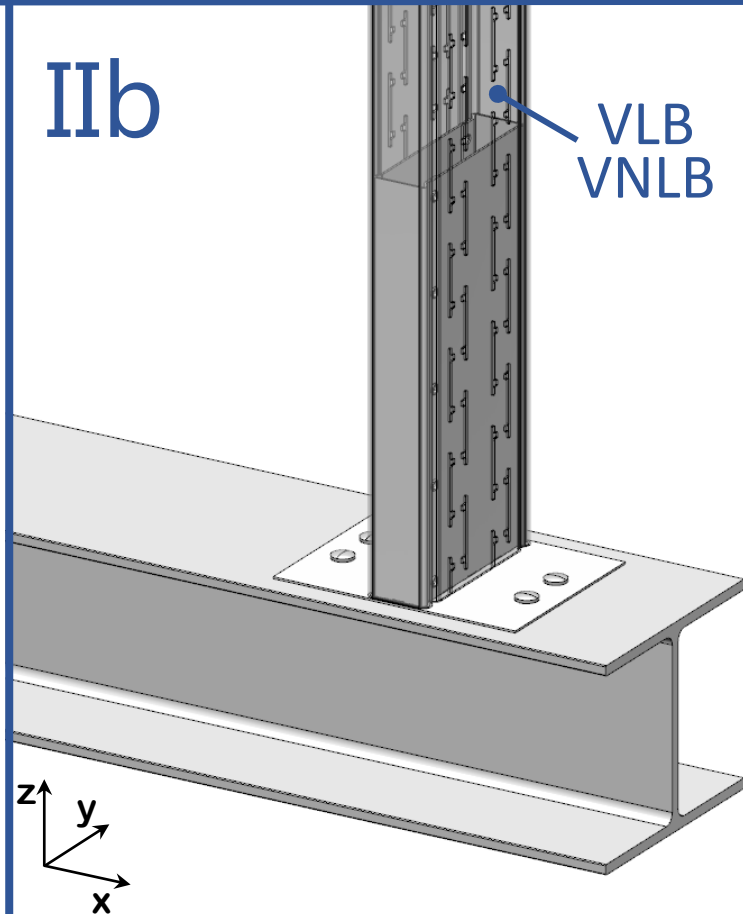

1x MR190620

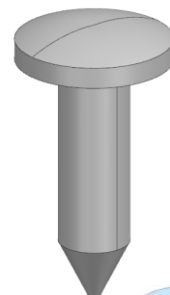

2x

