

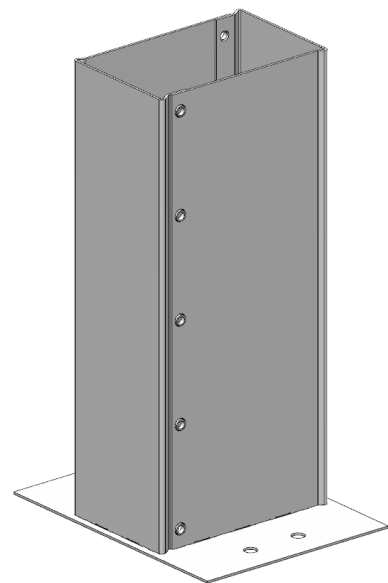
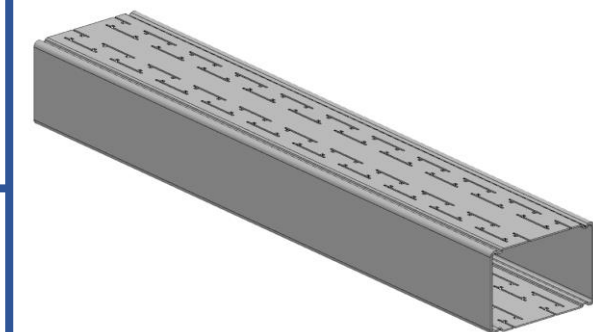



# StifFlex

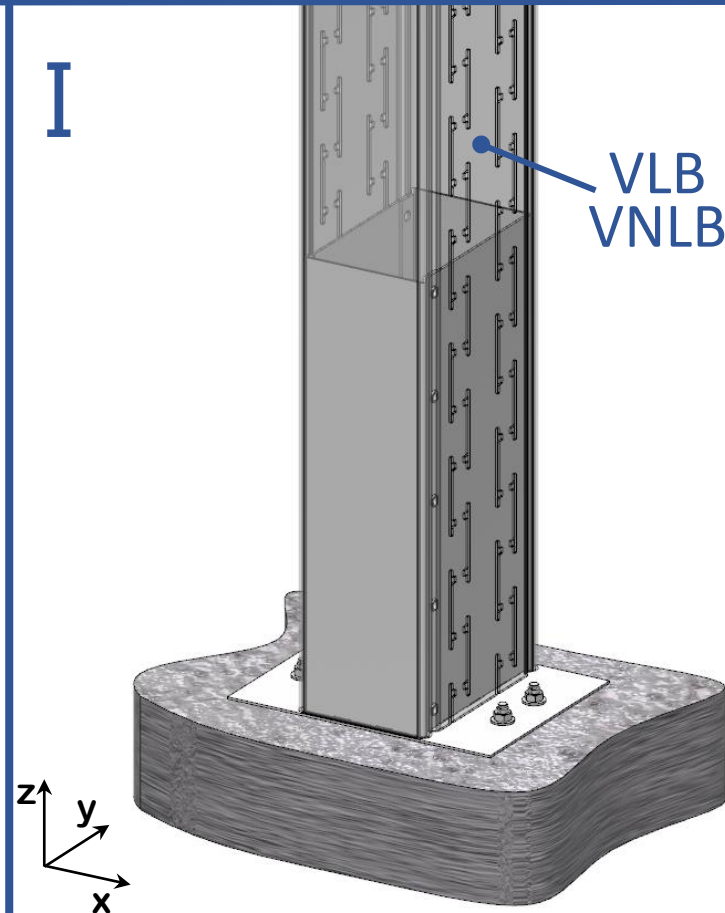


CF1913/400  
CF1913/400-W

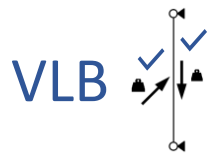


1x MS191320 /  
1x MS191330

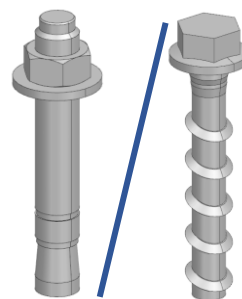


2x M10

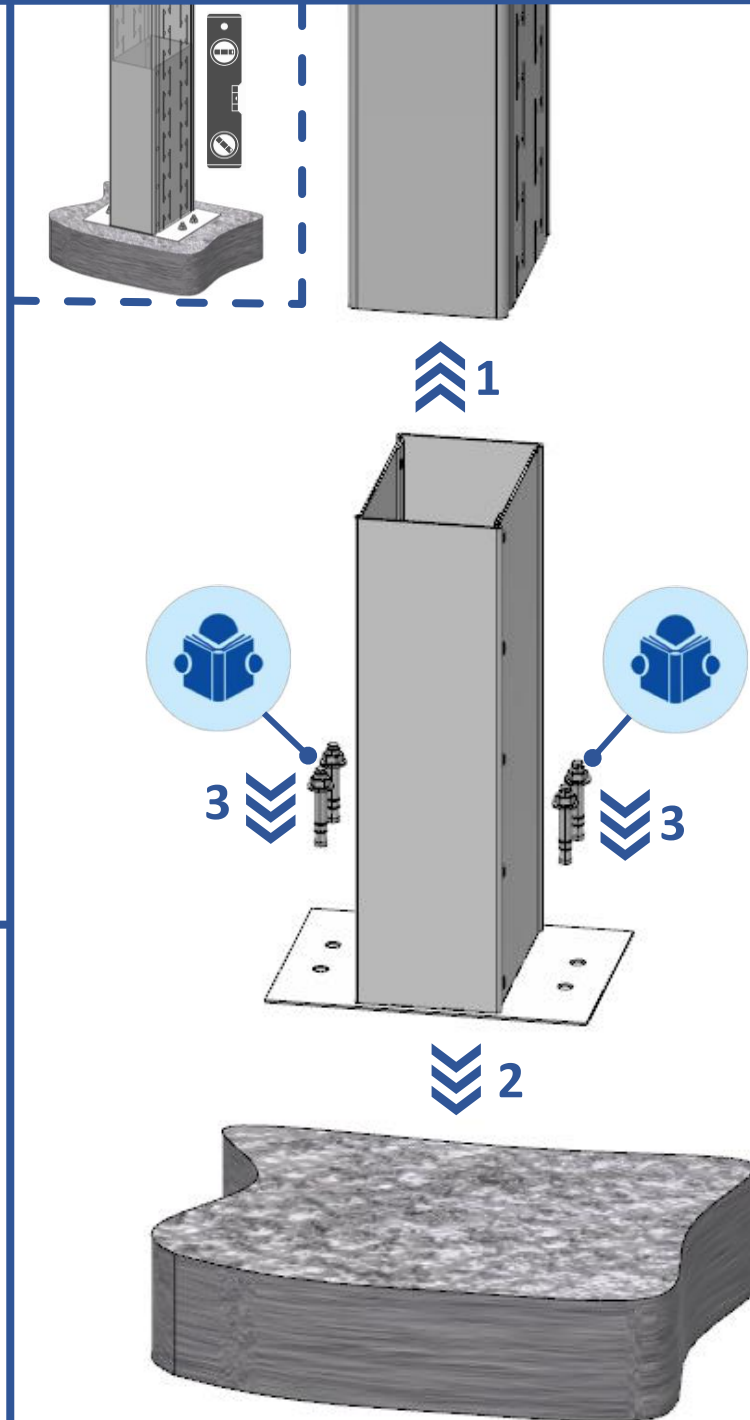


# Stiflex

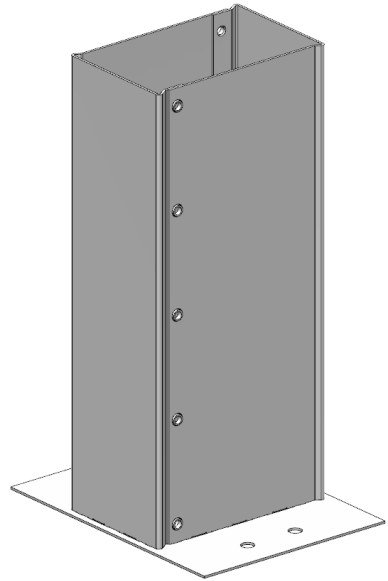




CF1913/400  
CF1913/400-W

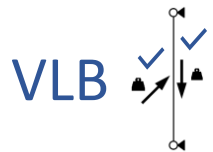


IIa

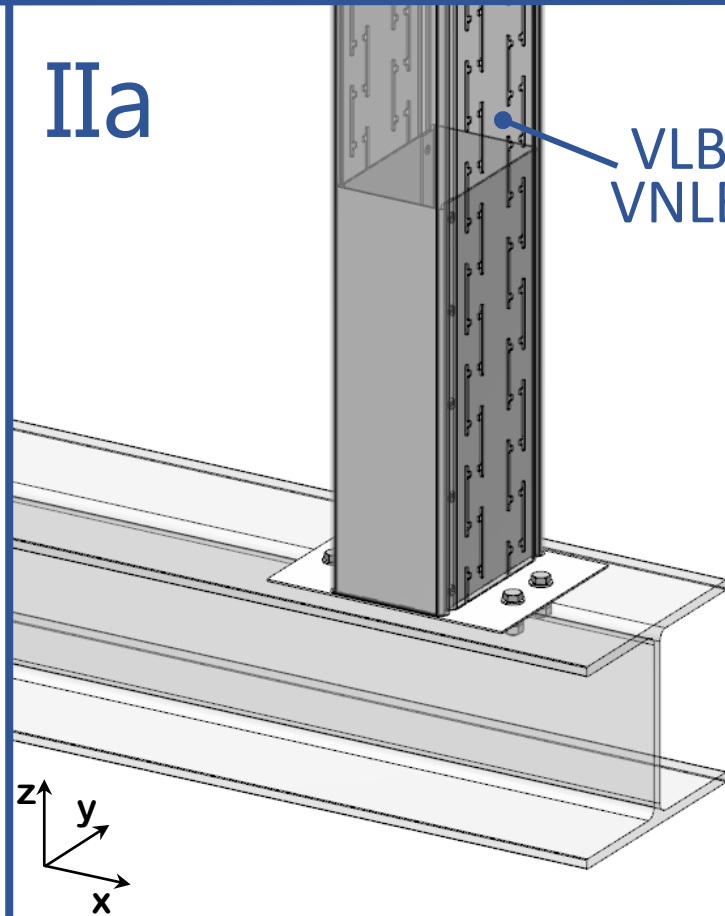


VLB  
VNLB

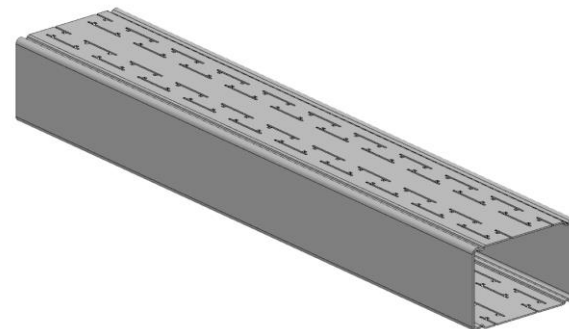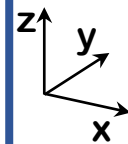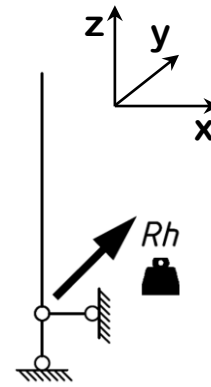


1x MS191320 /  
1x MS191330

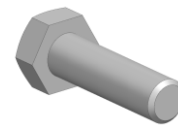


4x M10




8x M10




8x M10

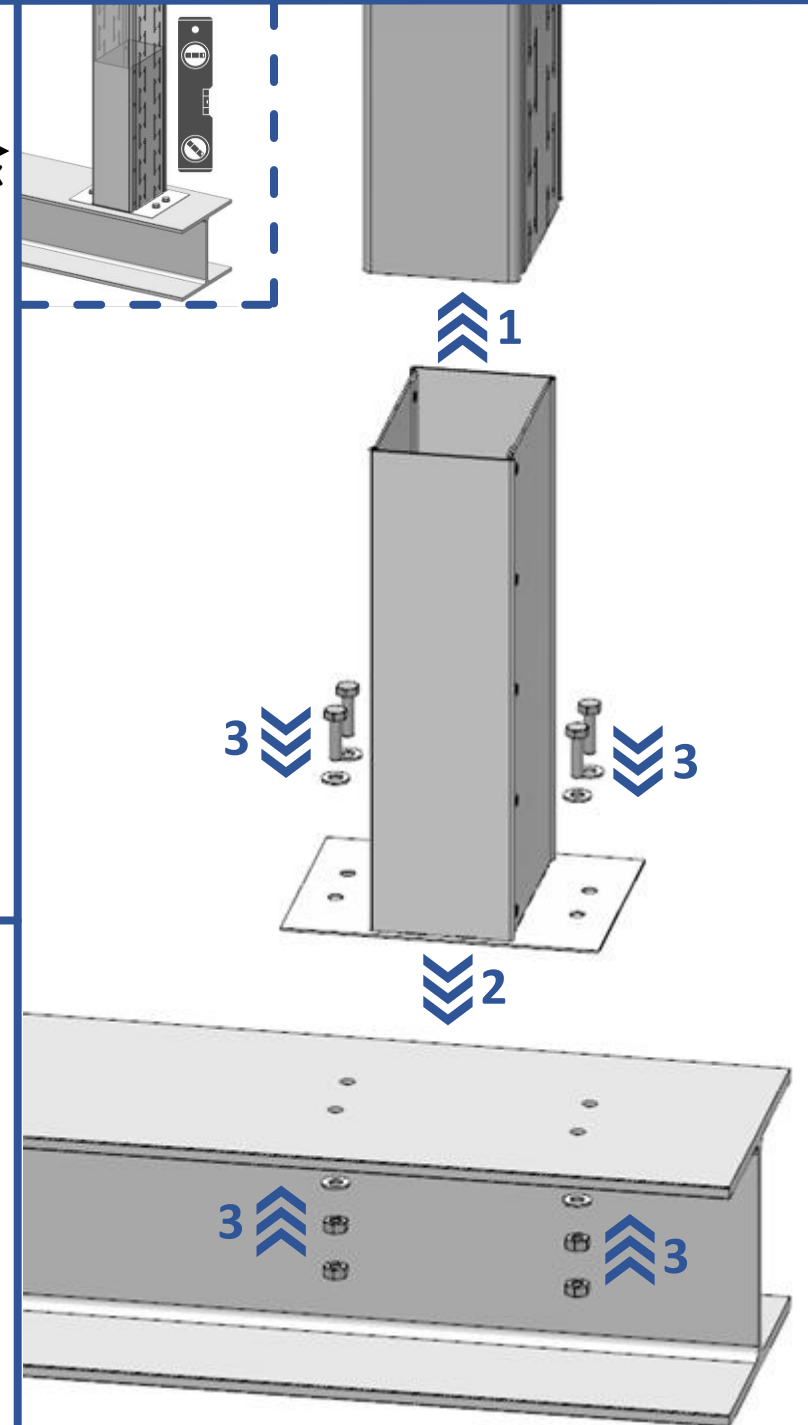




# StiFlex

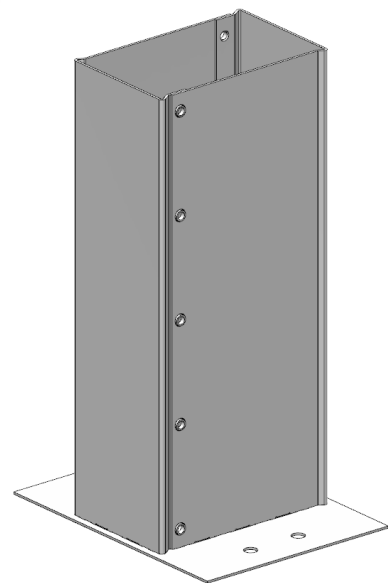


CF1913/400  
CF1913/400-W

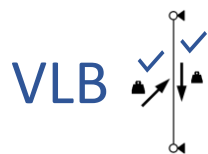

## IIb

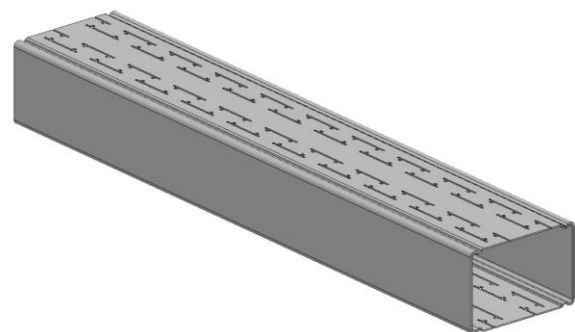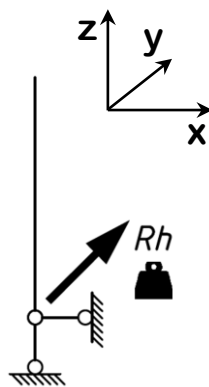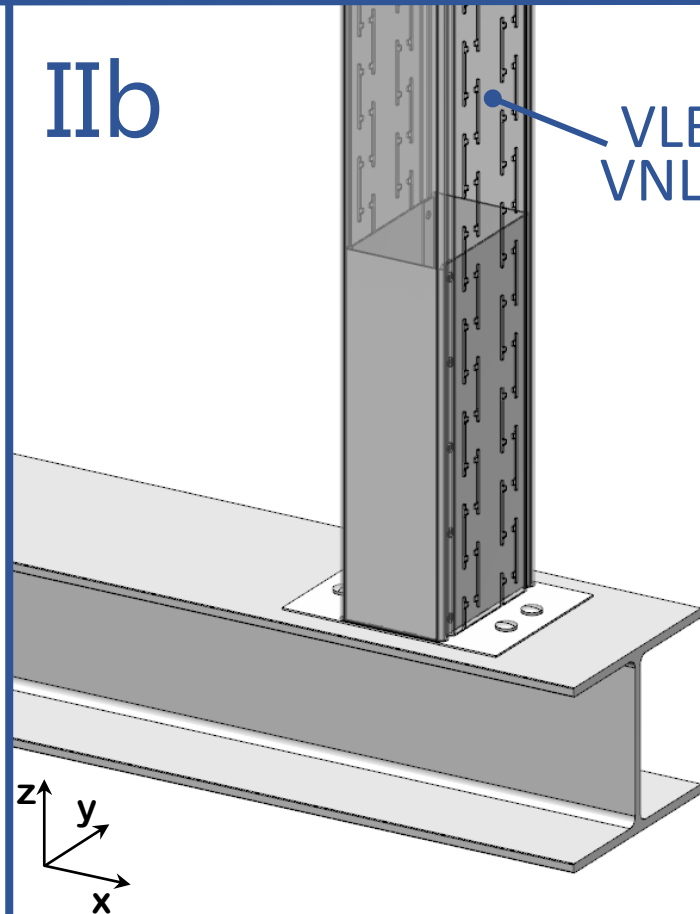

1x MS191320 /  
1x MS191330

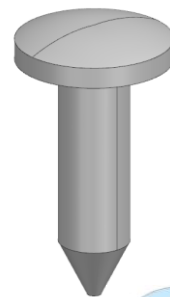

2x

