

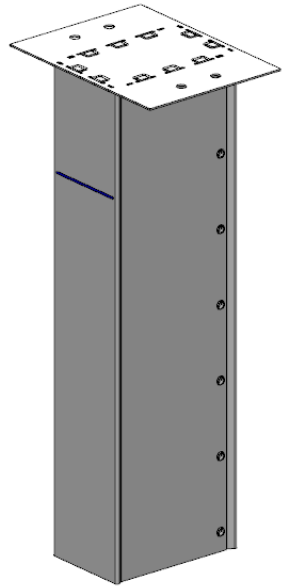
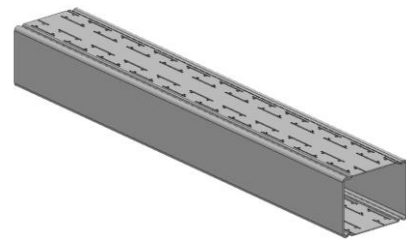
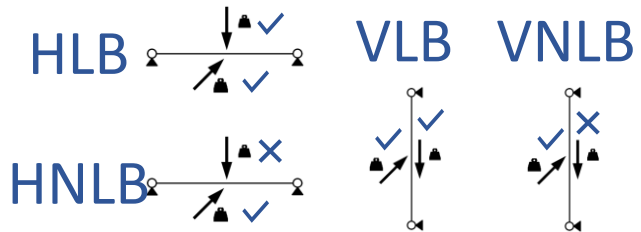



# Stiflex

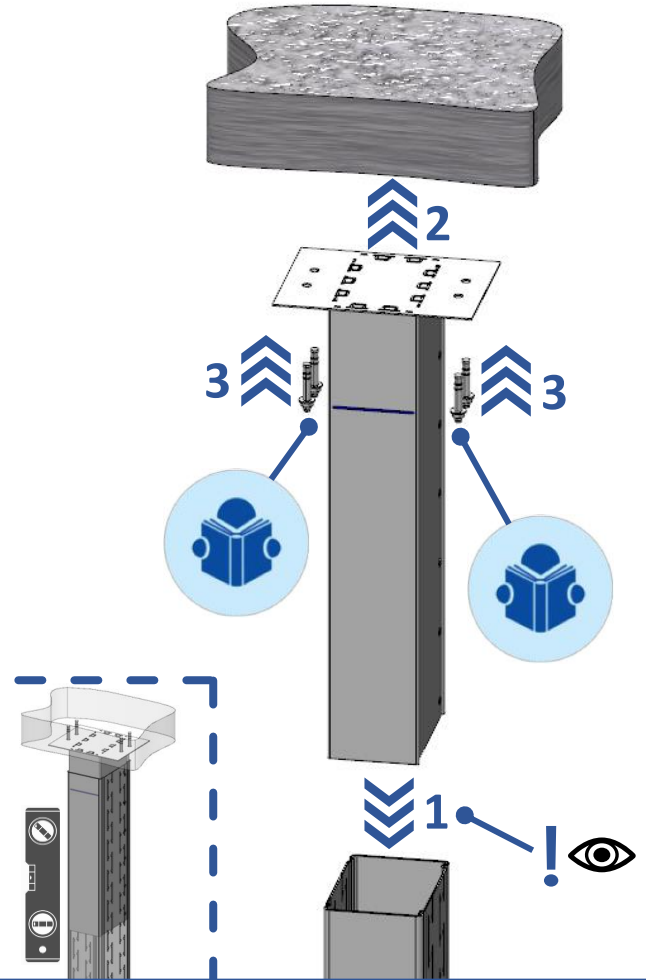


CF1913/600  
CF1913/600-W

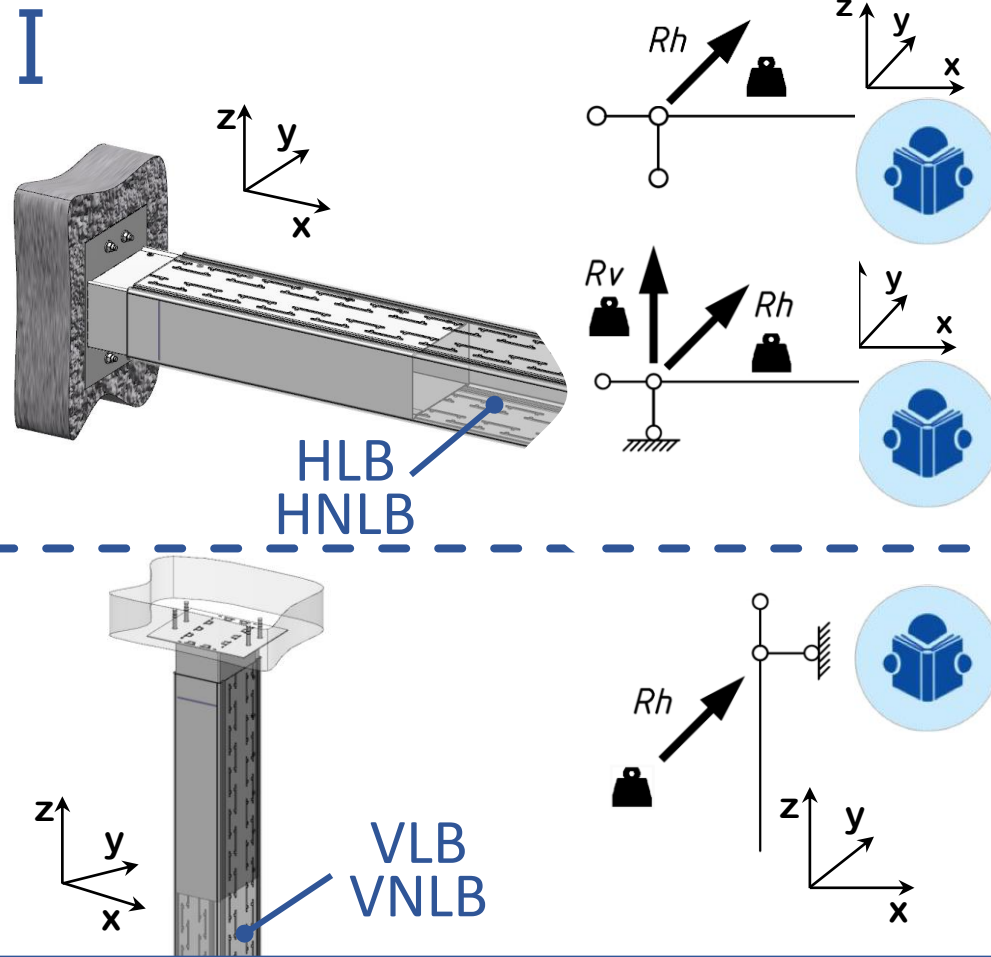


1x MR191320 /  
1x MR191330

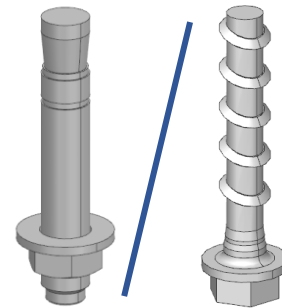

4x M10

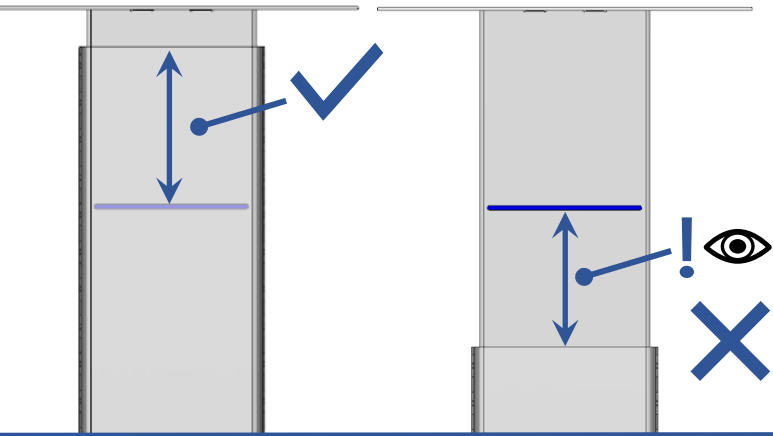


# StiFlex

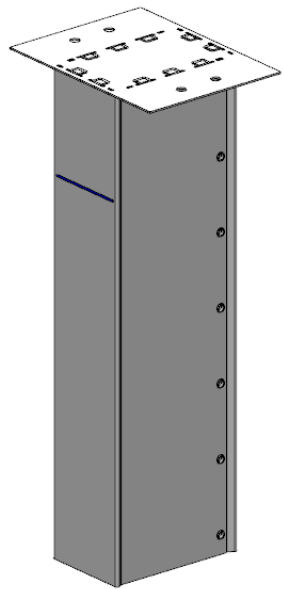







CF1913/600  
CF1913/600-W

## IIa

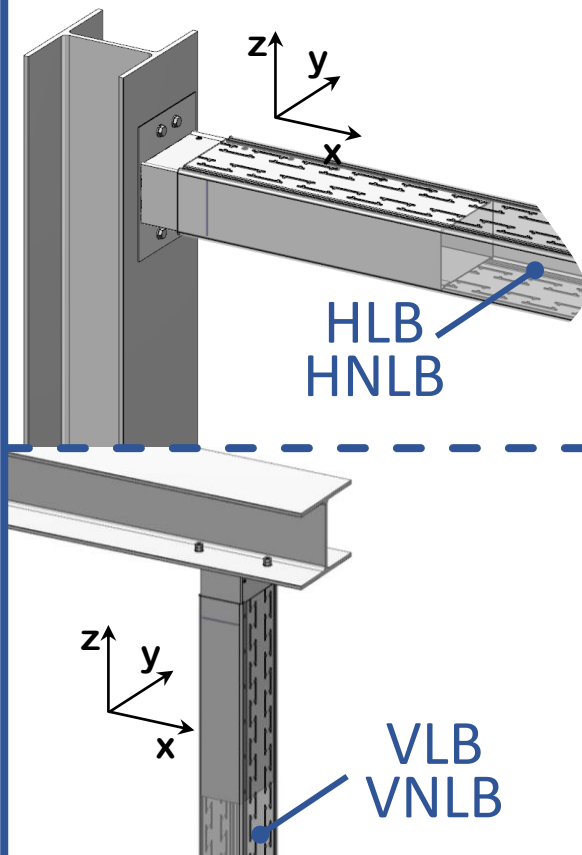


HLB  
HNLB


VLB  
VNLB

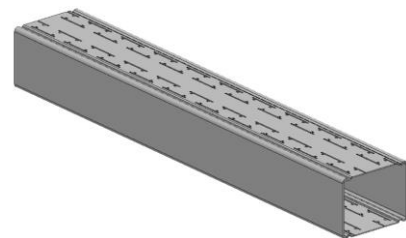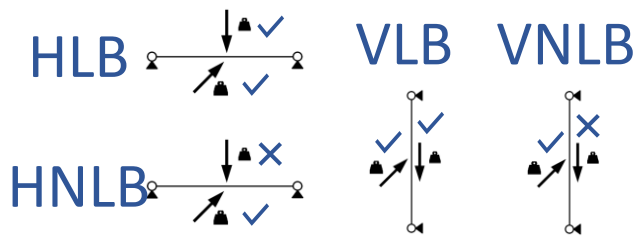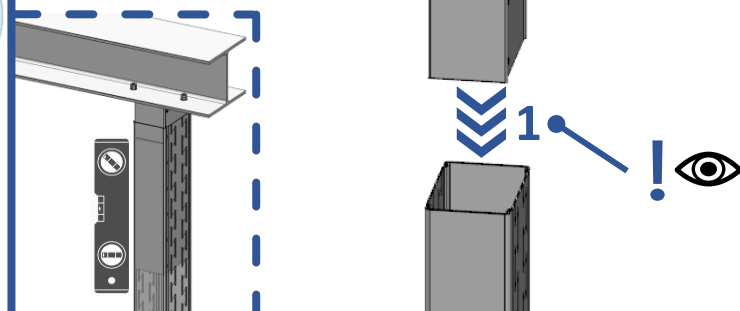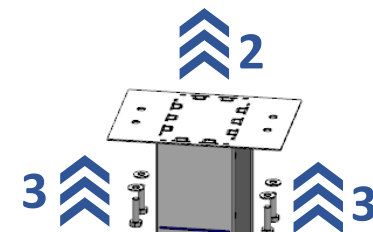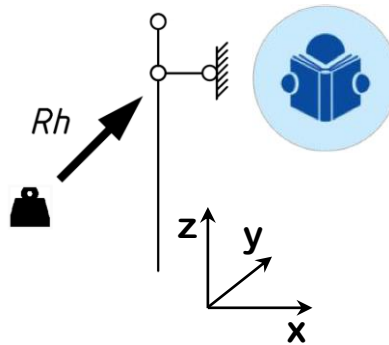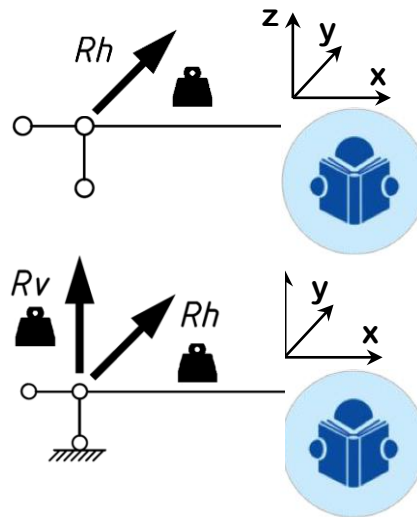

1x MR191320 /  
1x MR191330

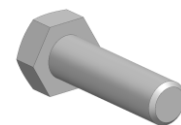


4x M10




8x M10



8x M10

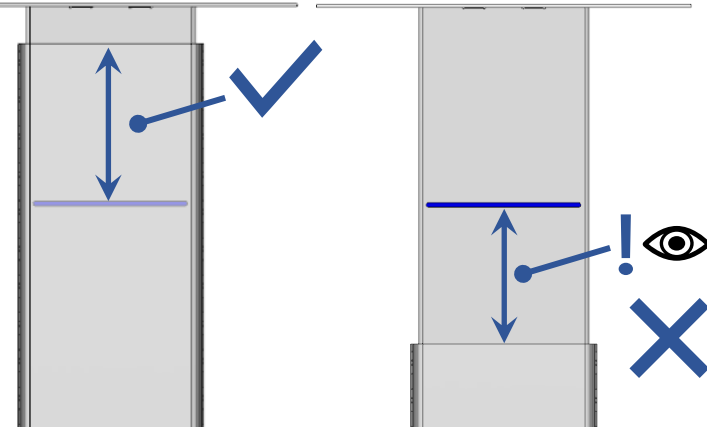


# StiFlex

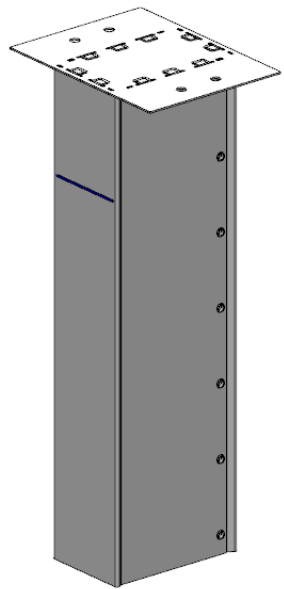





CF1913/600  
CF1913/600-W

## IIb

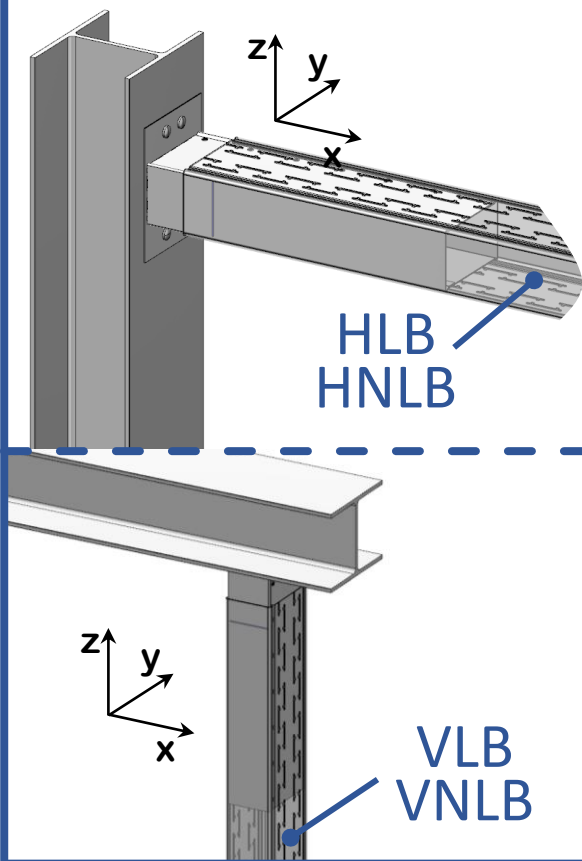

HLB  
HNLB

VLB  
VNLB

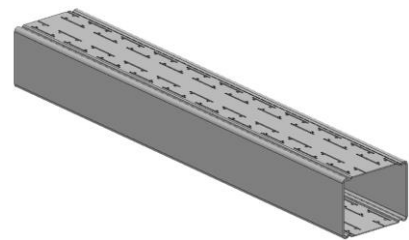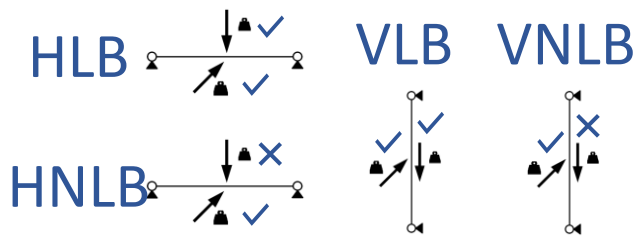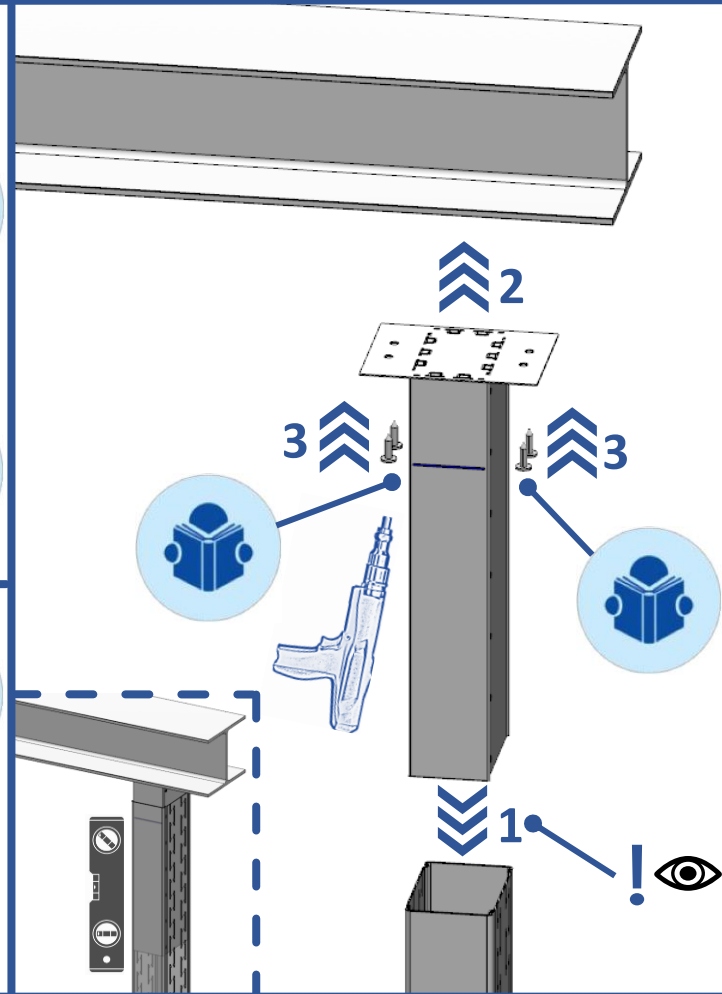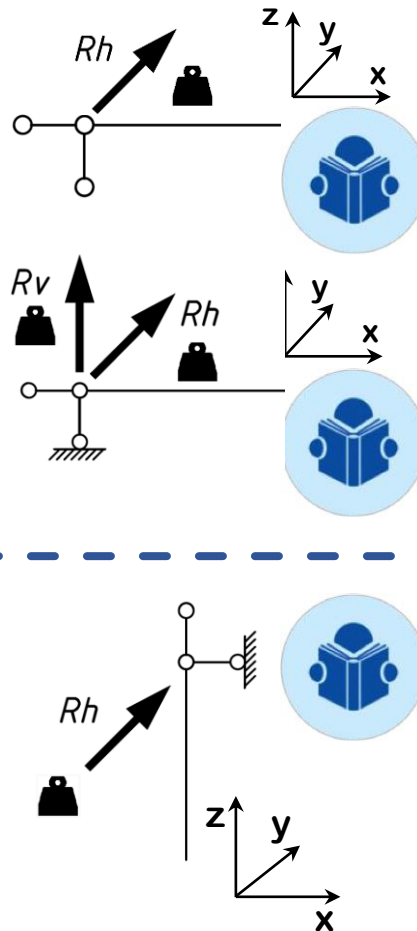

1x MR191320 /  
1x MR191330



4x

